
Dell™ S2740L Monitor User's Guide


[About Your Monitor](#)


[Troubleshooting](#)



Back View

[illegible]



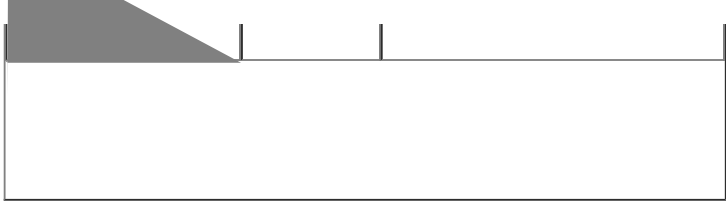

USB



NOTE: Do not connect all cables to the computer at the same time.

2. Connect either the DVI, the HDMI, or the VGA display connector cable to the corresponding video port on the back of your computer. Do not connect all cables on the same computer. Use all cables only when they are connected to different displays.

Organizing Your Cables

After attaching all necessary cables to your monitor and computer, (See [Connecting Your Monitor](#) for cable attachment,) organize all cables as shown above.


Removing the Monitor Stand



NOTE: To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a soft, clean surface.



NOTE:

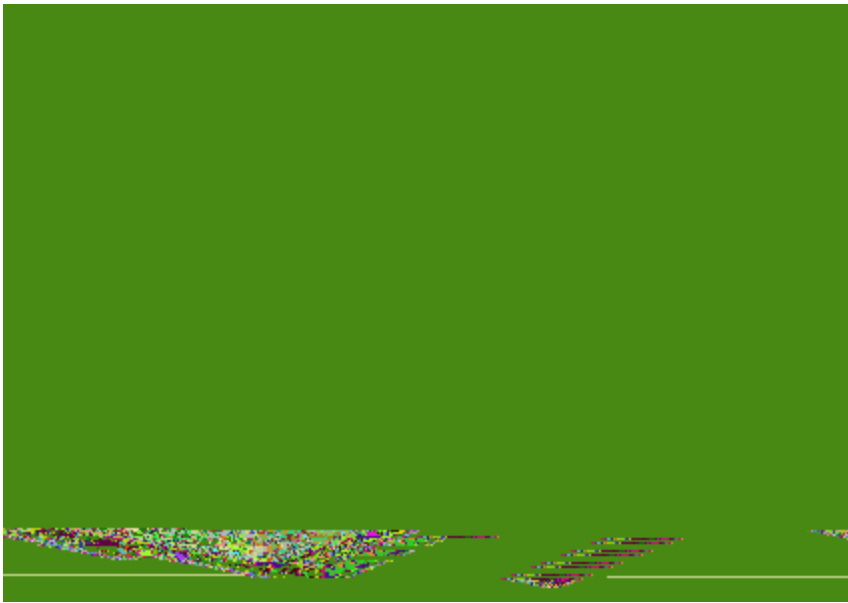



To remove the stand:


Place the 7-42 () 1 (the) -44 () monitor to


		
















Factory Reset

Reset all OSD settings to the factory preset values.

Personalize

Users can choose a feature from "Preset Modes", "Brightness/Contrast", "Auto Adjust", "Input Source", or "Aspect Ratio" and set it as a shortcut key.

--	--	--

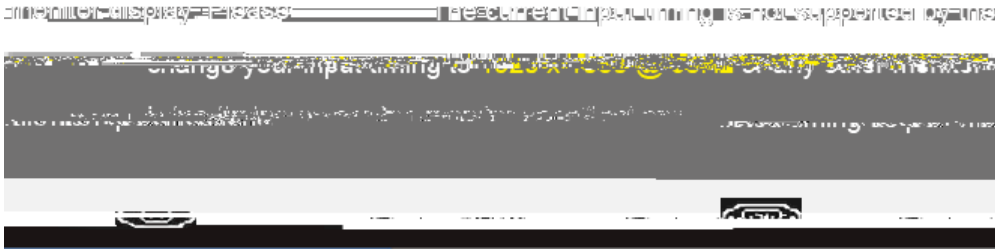

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor Specifications](#) for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 1920 x 1080.

You will see the following messa-11()145cbe(fohe)-97()1(the)-44()1DDC/CII is




If either VGA, DVI-rc3276()oher4976()HDMDVI - -

rc1276()alf

belowg



 **NOTE:** The stand is detached when the monitor is shipped from the factory.

[Back to Contents Page](#)

Troubleshooting

Dell™ S2740L Monitor User's Guide

[Self-Test](#)

[Built-in Diagnostics](#)

In-Store DemoTd [(Built)-72(-)-46(in)-10]TJ6268 cm 0 0 452205Diagnostics



|
